



Spare part lists for MagnaLift & Power-Grip lift magnets

Lift Magnet Spare Parts		LB non-charging units	LB-2G	LB-5G	LB-7G	LB-10G	LB-15G	BLM-25	BLM-50	BLM-60	BLMC-50	BMU-50	Type I	Type III
1004980	Resistor		x	x	x	x	x							
1004981	Resistor		x	x	x	x	x	x	x	x	x	x		
203565	Lift magnet switch													x
206360	Clear plastic switch spacer	x	x	x	x	x	x	x	x	x	x	x	x	x
361022	Control switch assembly	x	x	x	x	x	x	x	x	x	x	x	x	x
361024	Charger switch - BLM 25 only							x						
361025	Charger switch								x	x	x	x		
361026	Ammeter - BLM models							x	x	x	x	x		
361027	Control switch handle	x	x	x	x	x	x	x	x	x	x	x	x	x
361031	Battery cable red							x	x	x	x	x		
361032	Battery cable black							x	x	x	x	x		
361033	Release pad resistor							x	x	x	x	x		
361035	Magnet line receptical							x	x	x	x	x		
361079	Cabinet handle							x	x	x	x	x		
361080	Receptical cover							x	x	x	x	x		
361096	Cover knob							x	x	x	x	x		
361100	Ammeter - LB models	x	x	x	x	x	x							
361101	Polarized receptical	x												
361102	Polarized plug	x												
361108	Circuit breaker		x	x	x	x	x	x	x	x	x	x		
361109	Charging receptical		x	x	x	x	x	x	x	x	x	x		
361113	Transformer - 12V - LB models		x	x										
361113-BLM	Transformer - 12V - BLM & BMU							x	x	x	x	x		
361117	Rectifier stack		x	x	x	x	x	x	x	x	x	x		
361128	Clevis		x	x	x	x	x		x	x	x	x		
361129	Clevis pin		x	x	x	x	x	x	x	x	x	x		
361135	Cord assembly		x	x	x	x	x	x	x	x	x	x		
361136	Battery - jumper cable				x	x								
361137	Cable assembly - battery +	x	x	x										
361138	Battery cable - positive					x								
361139	Cable assembly - battery -	x	x	x	x	x	x	x						
361184	Battery cable - positive					x								
361288	Transformer 18V/24V					x	x							
361290	Transformer 36V							x						
361317	On-off plate		x	x	x	x	x						x	x
369191	Mag line plug							x	x	x	x	x		

Recommendations:

- provide S/N for lift magnet when ordering
- annual certifications include inspection of all spare parts
- keeping spare parts on your shelves reduces down time to near zero